

IMPORTANT NOTES


- Do not use liquid or a sprayer to clean the safe. Use a wet cloth instead.
- Do not place the product in an insecure and elevated place, lest it may fall over and damage the product or hurt people. Never spill liquid over the control panel, or it may cause electrical shock to the electronic parts inside and disable their proper functions.
- Never try to dismantle the product by yourself. Unguided Dismantling and incorrect reassembly of the inside of back cover may damage the electrical circuit and affects its performance. Where maintenance is required, please contact the local service center or local distributor.

MOUNTING METHOD

Fix the safe in the place which is not easy to move.

- Drill holes for expansion bolts (or clamping screws) in the right place.
- Turn the expansion bolts counter clockwise to separate.
- Use the expansion bolts (or clamping screws) to secure the case to the wall.
- Make sure the case is mounted in place as required and then tighten all screws.

⚠ CAUTION: Use the expansion bolt when there is a concrete wall surface. Use the clamping screw when there is a wooden wall surface.

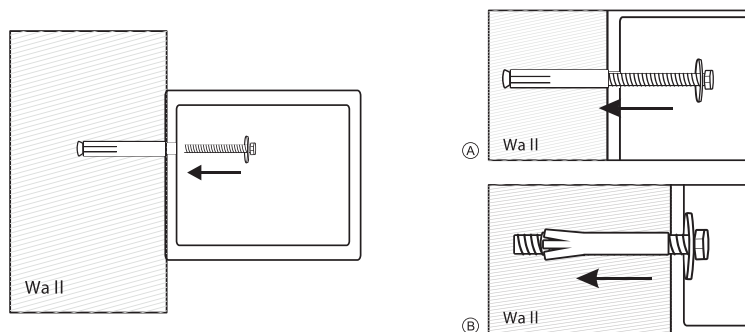

For any help, kindly consult the local distributor




FINGERPRINT LOCK SAFE


(FOR FPW SERIES)

⚠ **Please do not keep emergency keys in your safe!**

Schematic drawing of case

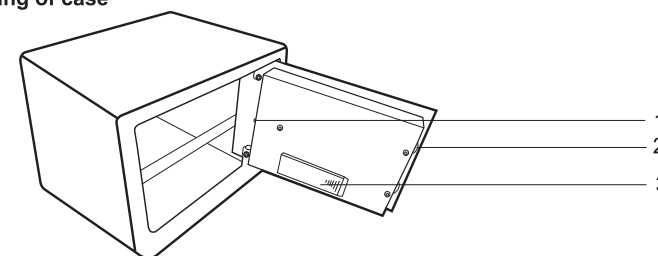

Schematic drawing of control panel

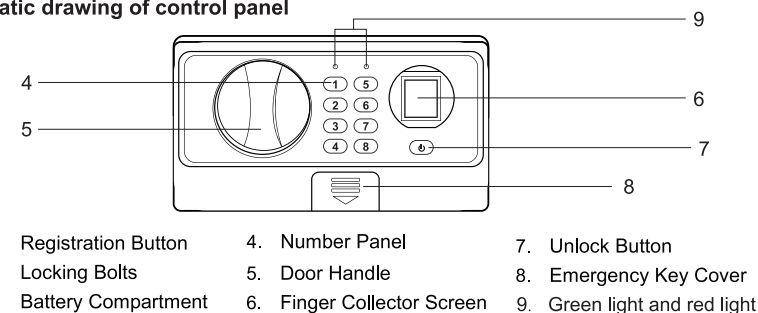

FUNCTION

- Locks: using high-quality anti-drilling locking bolts, high-theft proof performance
- 2 separate Registration Button: add fingerprint registration or delete fingerprint record or reset the code to factory default code
- Finger collector screen: fingerprint registration
- Numbers key on the panel: representing 1,2,3,4,5,6,7,8 separately
- Key "1": set user code
- Emergency Key Cover: remove the cover and open the safe with emergency key
- Power supply: 4 X AA batteries

PREPARATION

- The safe on delivery comes with no registered fingerprints.
- The safe is not loaded with batteries, you may insert the emergency key into the Emergency Key Cover to open the door.

- Uncover the Battery Compartment cover at the back of door. And put in 4 X AA batteries. Please pay attention to the polarity of the batteries. For normal use, the batteries could last for one year.
- The preset code of safe on delivery is "1234", the user may open the door with the preset code when batteries are placed and tested normal.

❗ **CAUTION:** For security of your property, you need to change the preset code.

POWER SUPPLY

- Pull the door open.
- Pull out the Battery Compartment cover.
- Replace 4 fresh batteries by lining them up in a manner as indicates by the " + " and " - " signs.

❗ **CAUTION:** If the red light flashes during the operation, it means the batteries are low. While choosing battery, suggest to use high-powered alkaline battery with high quality. Please do not use any inferior, counterfeit or carbon-zinc batteries.

FINGERPRINT REGISTRATION

- Press the Green Registration Button, you can hear short "Beep, Beep".
- Put your finger at Finger Collector Screen. You can hear "Beep, Beep" for two times and at the same time the light on the Finger Collector Screen will be on.
- Then put your finger at the Finger Collector Screen again, you can hear a long beep which means the fingerprint registration is successful. If the red light and green light is flashing at the same time, it means the registration is failed.
- According to this method, you can register other fingerprints.

❗ **CAUTION:** Maximum 20 fingerprints can be registered.

SET USER CODE

Press and hold number key "1" for around 5 seconds, green indicator light is on and there will be two short beeps. Input original code and press Unlock Button to confirm. After hearing two short "Beeps", input new code (4 to 8 digits) and press the Unlock Button. Input the new code again, press the Unlock Button, and you will hear a long beep which means the new code is set successfully.

❗ **CAUTION:** Factory preset code is 1234.

UNLOCK THE SAFE


- Fingerprint unlock

Put your registered finger directly on the Finger Collector Screen, the light on the Finger Collector Screen will be on and you will hear a beep and the indicator green light will be on, you can rotate the Door Handle to open the safe


- Password unlock

Input code (4 to 8 digits) and press Unlock Button to confirm. After hearing a long "Beep", the green light will be on. You can rotate the Door Handle to open the safe

❗ **CAUTION:** In order to improve the correct rate of finger identification, users can refer to the following advices: Suggest not use the finger collector screen in bright light. Suggest each user registers 2-3 fingerprints. Suggest female and children try to register with thumb and middle finger. Try to press with even power. It's not good to press with too heavy or light power. Suggest to press gently. If encountered with very dry weather, suggest to breathe toward fingers till a little wet.

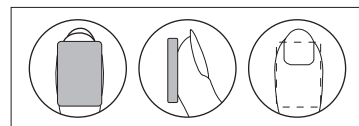

I. Correct

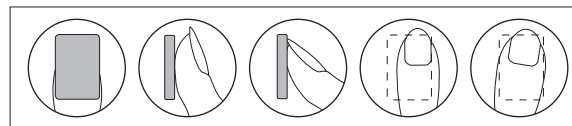



II. Incorrect

EMERGENCY KEY

Upon first receipt of the safe, you should use the emergency key to open the safe.

- Remove the Emergency Key Cover
- Insert the emergency key and turn counter clockwise.
- Rotate the Door Handle clockwise and open the door.

❗ **CAUTION:** For your total security, please take care of the emergency key and keep them in one secret place out of safe.

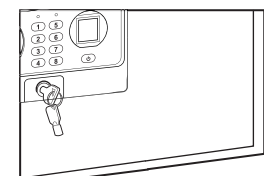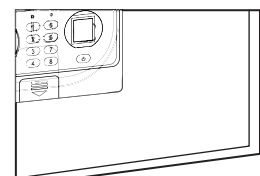

SYSTEM INITIALIZATION/ DELETION

To delete all the registered fingerprints: press and hold the green Registration Button for around 3 seconds, the green light will be on and you will hear a long beep, which means the deletion is successful.

To delete all the registered pin code and reset to factory default code: press the red Registration Button, the green light will be on and you will hear a long beep, which means the deletion is successful and the pin code has been reset to factory default code(1 2 3 4).